



White Feet Tile

Ceramic

Ceramic Cool Roof Tile

Water Proof | Heat Reflective | Stain Free | Anti Fungal | Anti Skid

About Us


White Feet Tile Industry established in the year 2013 and became the renowned manufacturers of Cool Roof Tiles in the tiles industry, our products are best in quality and price.

We are having well qualified professionals with well maintained factory space to make the product well. We are also having our own Transport facility for on time delivery of material for hassle free site laying works.



Sugar Finish
300 X 300 MM
9MM
Thickness
Box-10 Pcs
WFT- 1000



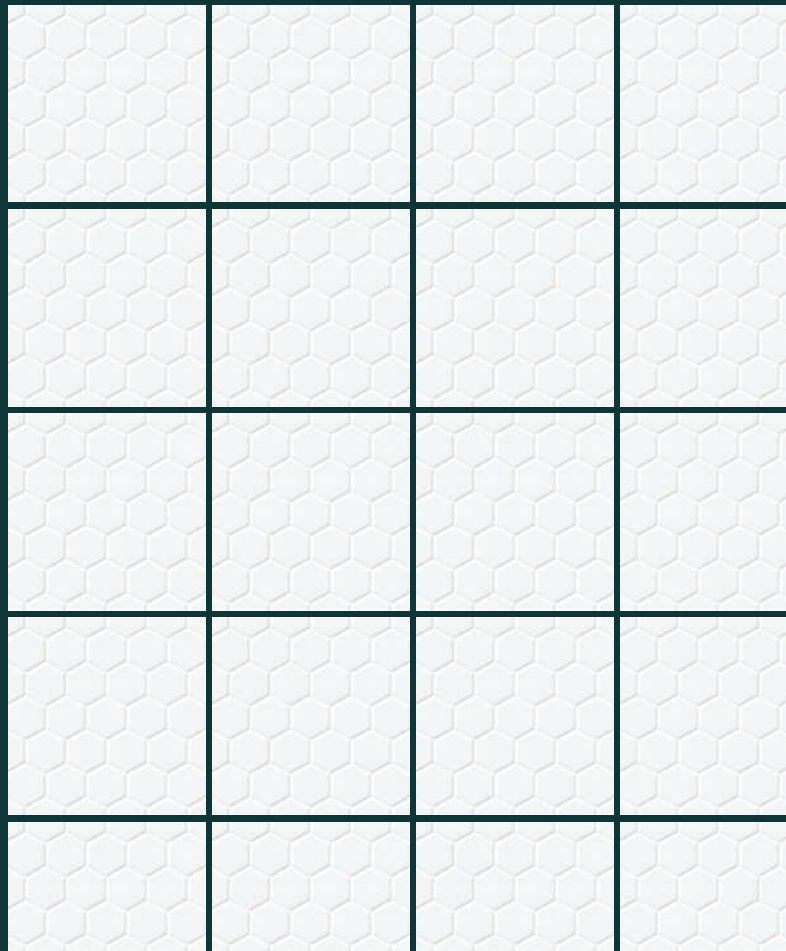

Sugar Finish



300 X 300 MM


9MM

Thickness

Box-10 Pcs

WFT- 1002

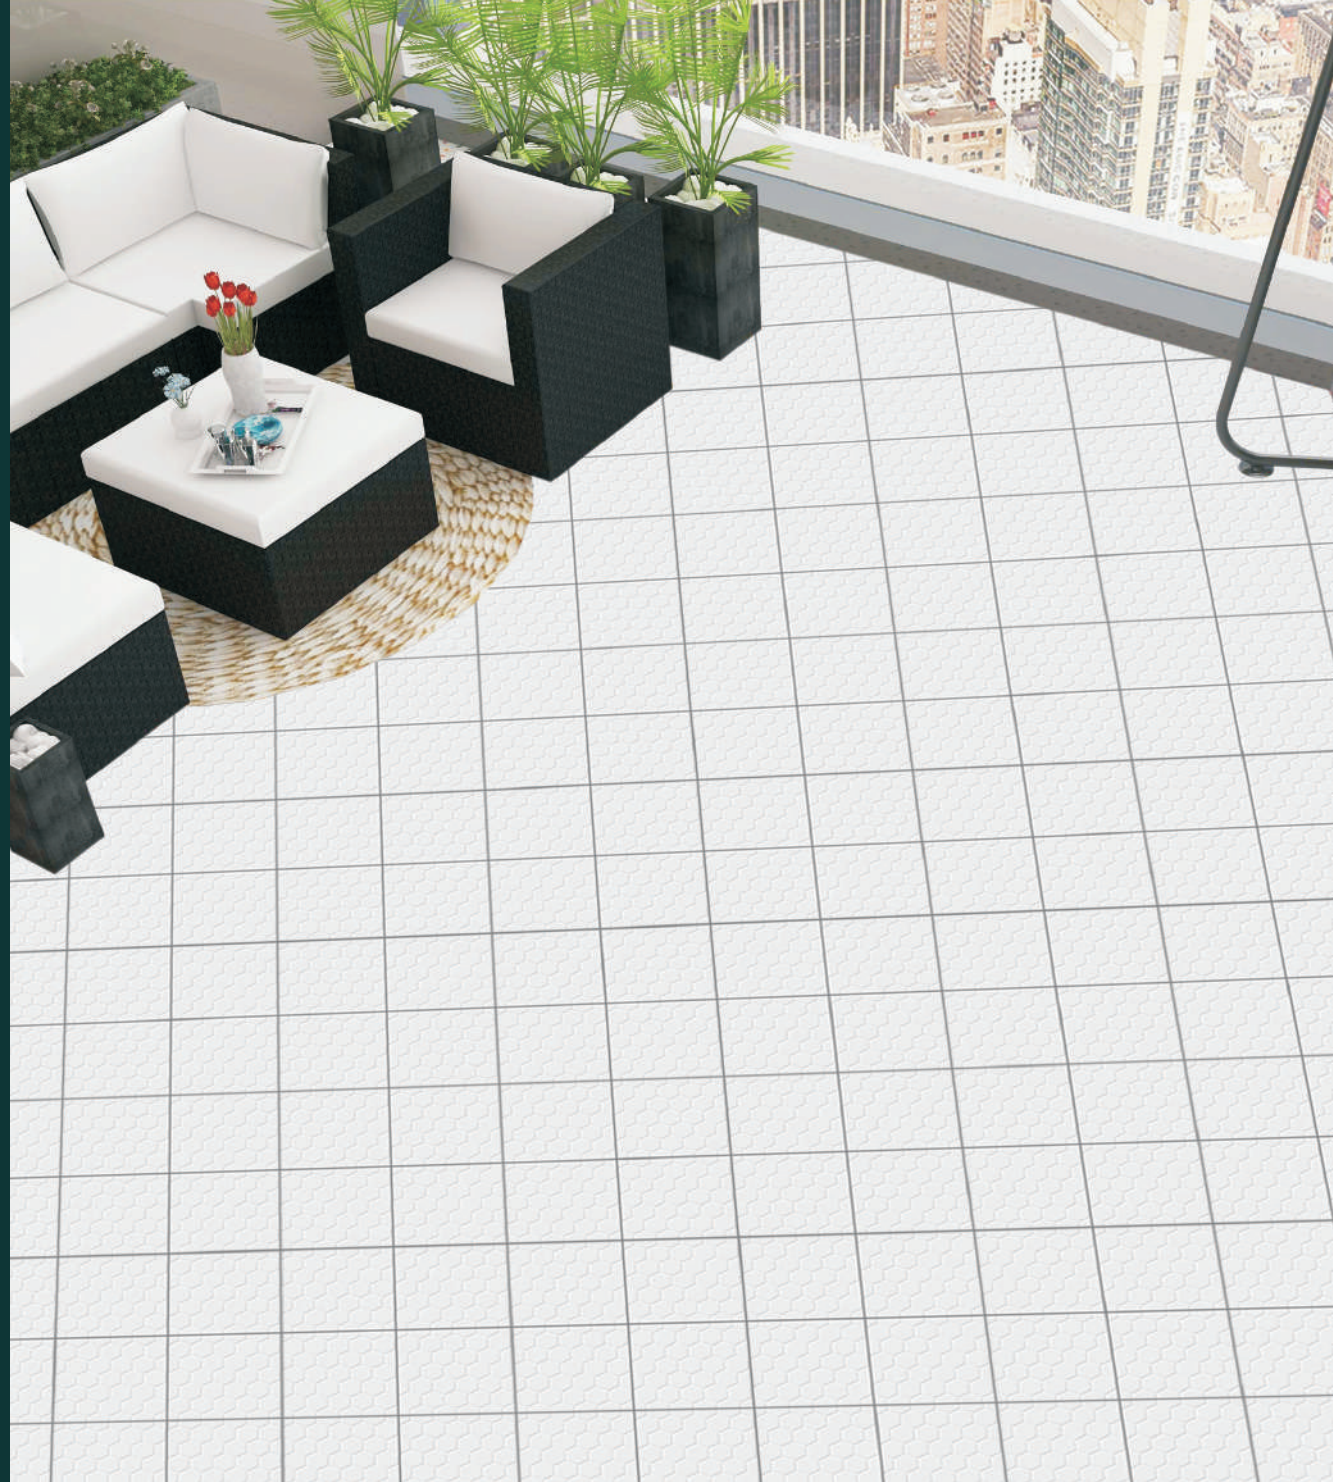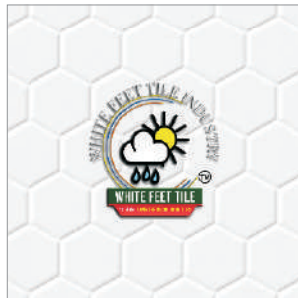

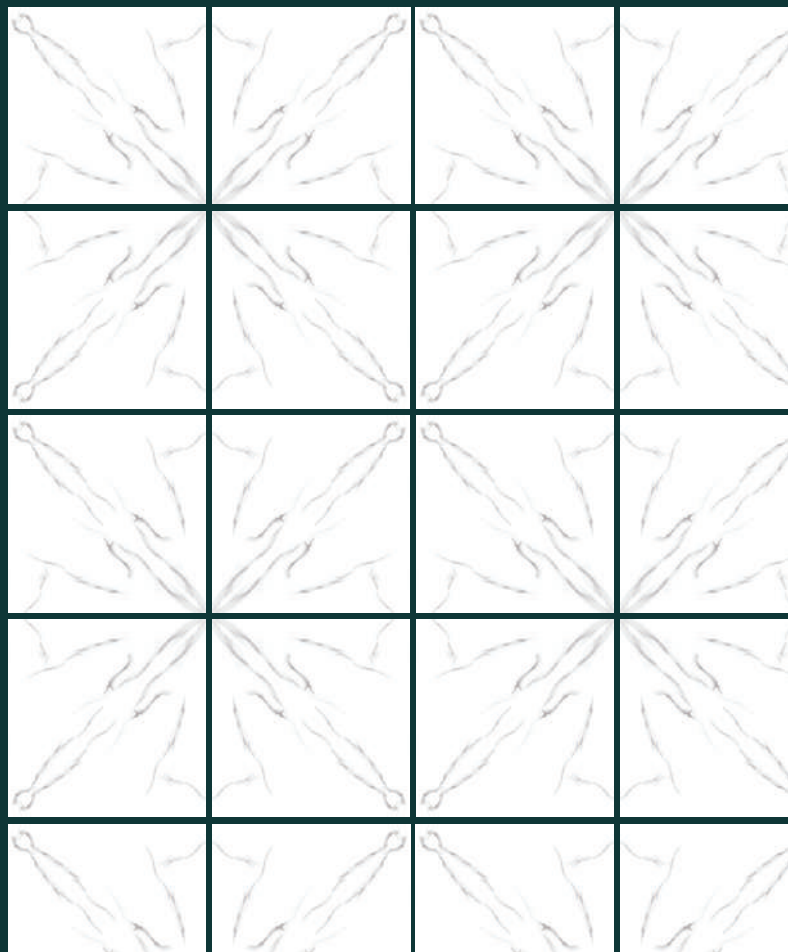

Sugar Finish

300 X 300 MM


9MM

Thickness

Box-10 Pcs

WFT- 1077



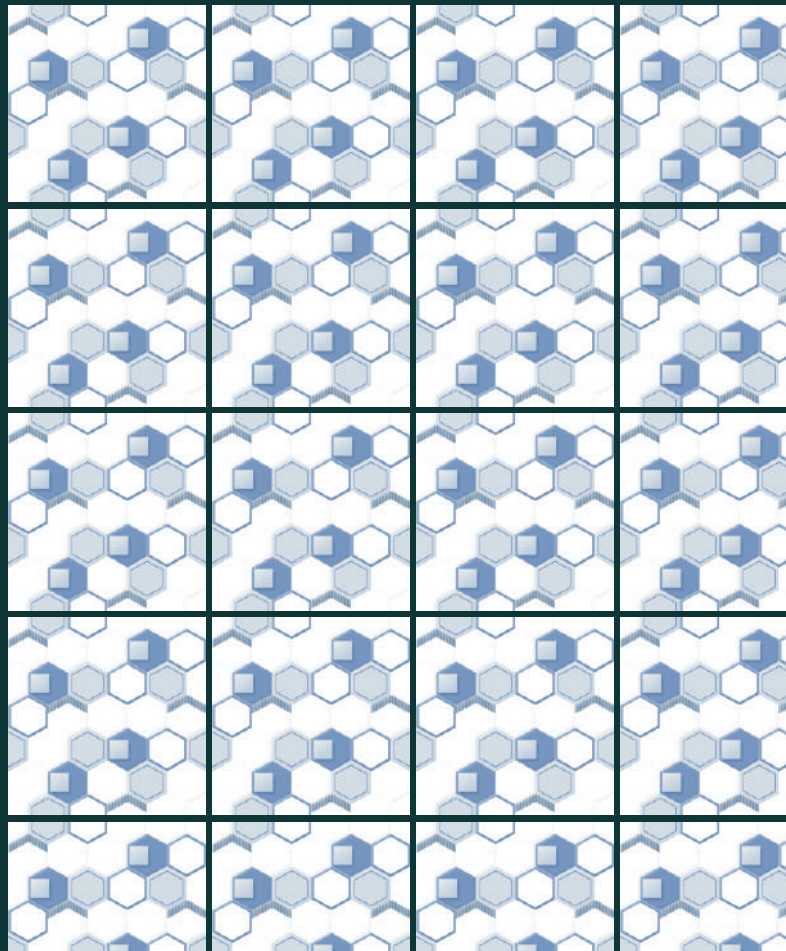

Sugar Finish

300 X 300 MM


9MM

Thickness

Box-10 Pcs

WFT- 0098



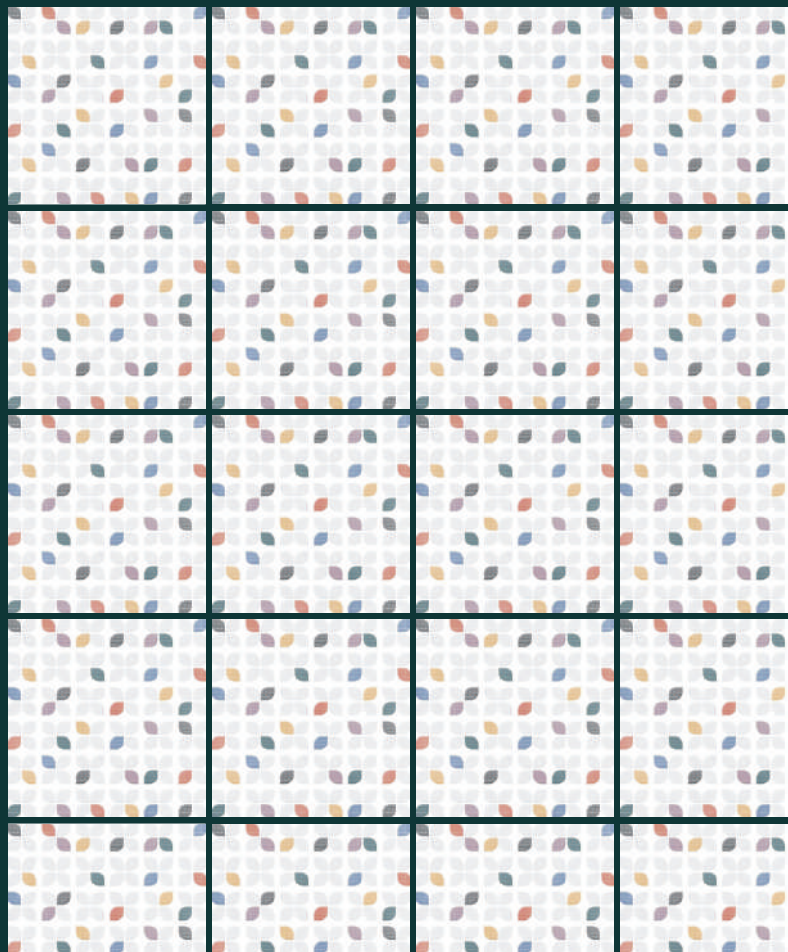

Sugar Finish

300 X 300 MM


9MM

Thickness

Box-10 Pcs

WFT- 1040



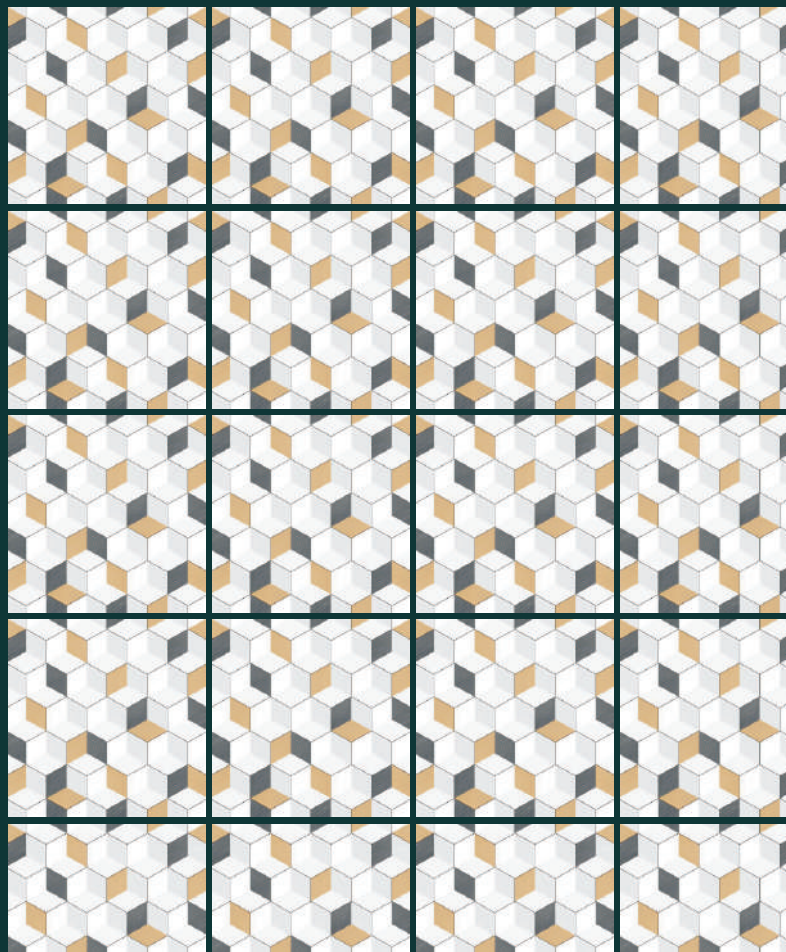

Sugar Finish

300 X 300 MM


9MM

Thickness

Box-10 Pcs

WFT- 1033



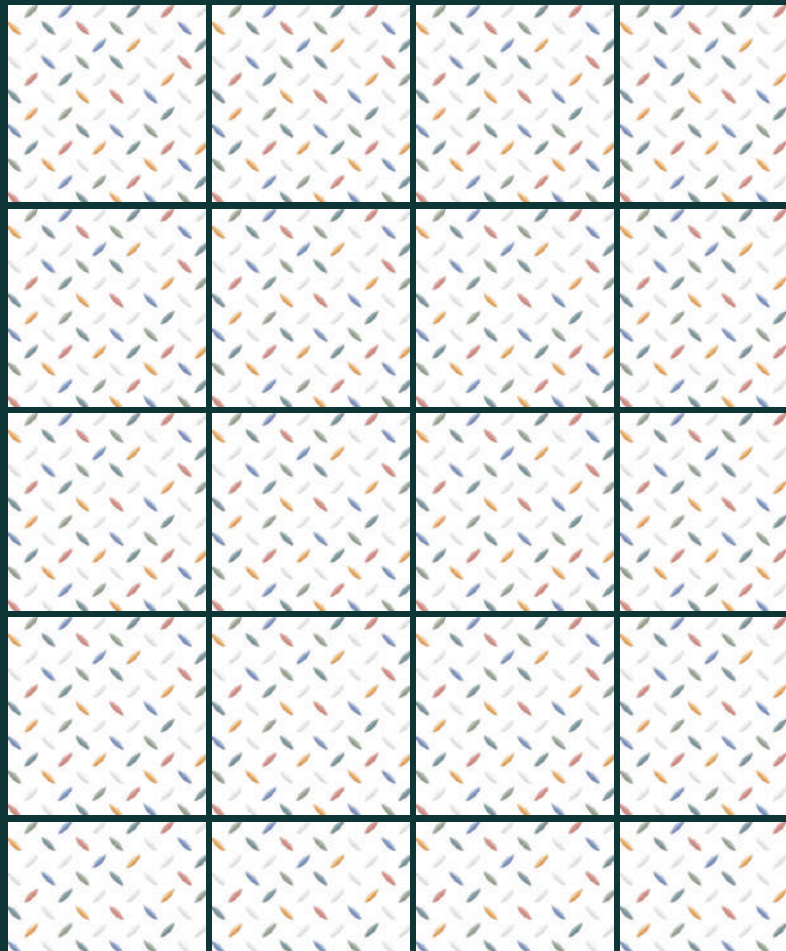

Sugar Finish

300 X 300 MM


9MM

Thickness

Box-10 Pcs

WFT- 1013



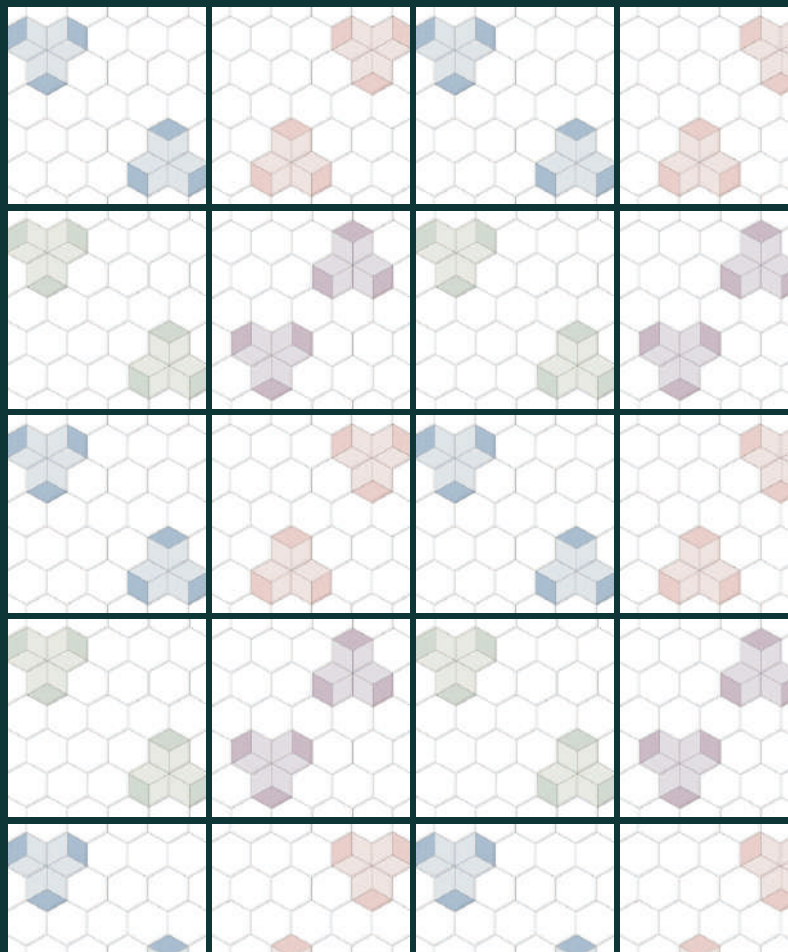

Sugar Finish

300 X 300 MM


9MM

Thickness

Box-10 Pcs

WFT- 1006



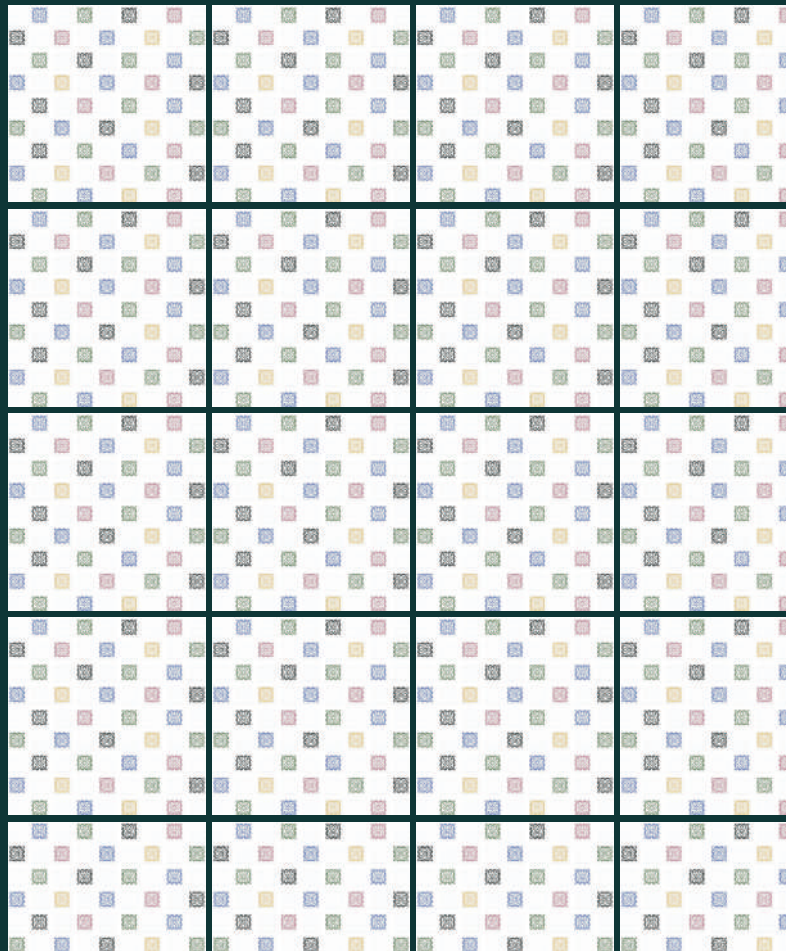

Sugar Finish

300 X 300 MM


9MM

Thickness

Box-10 Pcs

WFT- 1031



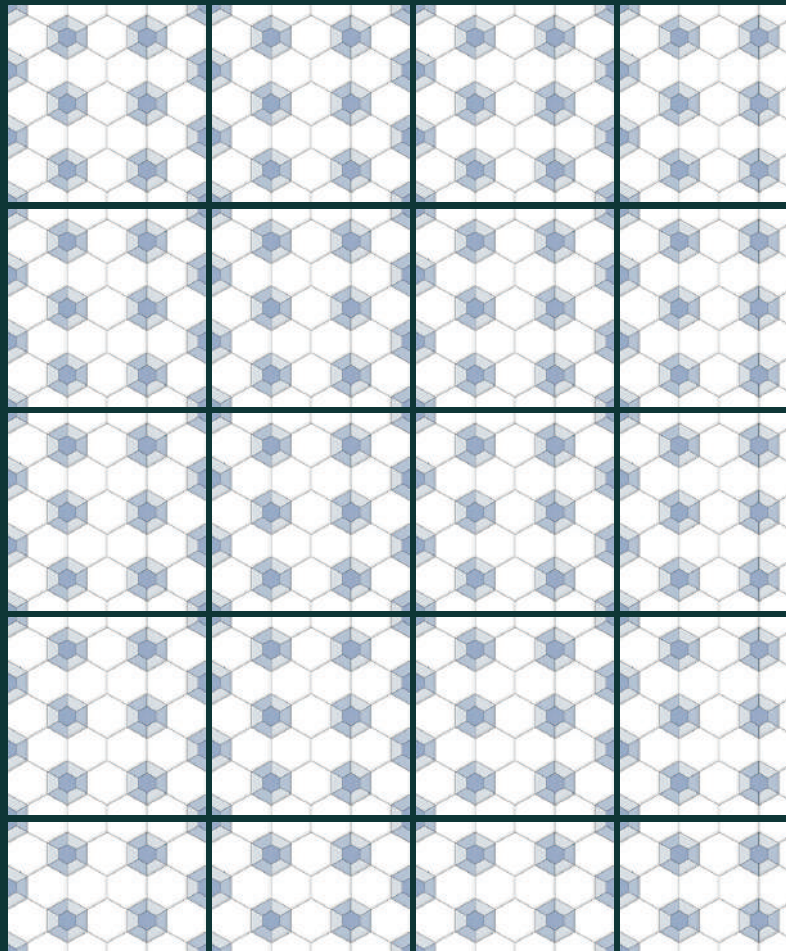

Sugar Finish

300 X 300 MM

9MM

Thickness

Box-10 Pcs

WFT- 1009



White Feet Grout



Weight 10Kg

White feet sanded grout is made of blended portland cement, graded aggregates, fortifiers and pigments, it provides a tile joint that is strong, hard, durable and colourfast.

White Feet Grout Admix



250ml

Grout Admix is specially designed latex admix to be used with sanded & unsanded grout.

Mixing Ratio : Use approximately 2to2.25 litres of water mixed



Factory/Office :

No:350/1, Kundrathur Main Road,Kovur,
Chennai - 600122.



www.whitefeettile.in,
www.whitefeet.in

Laying Instructions for Cool Roof Tiles

- 1) Prepare base mortar with cement and sand in the ratio 1:4 along with waterproofing chemicals.
- 2) The total mortar thickness should not be more than 25mm.
- 3) Prepare cement slurry as thick paste to spread on the mortar.
- 4) Use a 4mm spacer in between tiles.
- 5) Do not use a hammer for laying.
- 6) Fill the joints with white whitefeet waterproofing grouting Materials.
- 7) Do not use the layed area for 48 hours.